

Palert P Wave Alarm System User Manual

- ✧ Version: 1.00 2010/04
- ✧ SANLIEN TECHNOLOGY CORP.
- ✧ INDUSTRY AUTOMATION DIV.
- ✧ TEL:02-86659813 FAX:02-86659814
- ✧ <http://www.sanlien.com>

| | |
|---|----|
| 1. Features..... | 6 |
| 2. Application Topology | 7 |
| 3. Hardware information | 8 |
| 3.1. Wiring | 8 |
| 3.2. Information for LED Display | 8 |
| 3.3. Digital Inputs Configurations | 9 |
| ⊙ Reset to Factory Setting | 9 |
| ⊙ Display IP Information..... | 10 |
| ⊙ Display The Last Earthquake Information | 10 |
| 3.4. RTD (Real Time Data stream) Output Control | 10 |
| 3.5. Parameters for Autoexec.bat..... | 11 |
| 3.6. DOs Wiring and Characteristics | 11 |
| 3.7. DIs Wiring | 11 |
| 3.8. Installation | 12 |
| 4. Parameters Setup..... | 13 |
| 4.1. Parameters List | 13 |
| 4.2. Parameters Description..... | 17 |
| ⊙Address 100, NTP Synchronal and Server Connected Flag..... | 17 |
| ⊙Address 101, Real-Time a Axis Acceleration | 17 |
| ⊙Address 102, Real-Time b Axis Acceleration | 17 |
| ⊙Address 103, Real-Time c Axis Acceleration..... | 17 |
| ⊙Address 104, Real-Time Vector Acceleration..... | 18 |
| ⊙Address 105, a Axis Offset | 18 |
| ⊙Address 106, b Axis Offset | 18 |
| ⊙Address 107, c Axis Offset | 18 |
| ⊙Address 108, Maximum Vector in Earthquake | 18 |
| ⊙Address 109, Real-Time Earthquake Intensity..... | 18 |
| ⊙Address 110, Maximum Intensity in Earthquake | 19 |
| ⊙Address 111, Earthquake Indicator..... | 19 |
| ⊙Address 112, LTA Ready Indicator | 19 |
| ⊙Address 113, Setup Parameters..... | 19 |
| ⊙Address 114, Time Zone..... | 20 |
| ⊙Address 115, STA Duration | 20 |
| ⊙Address 116, LTA Duration | 20 |
| ⊙Address 117, STA/LTA Trigger Threshold..... | 20 |
| ⊙Address 118, Operation Mode..... | 20 |
| ⊙Address 119, DI/Os Status | 21 |

| | |
|---|----|
| ◎Address 120, Earthquake Event Sustained Duration | 22 |
| ◎Address 121, PGA Watch Threshold | 22 |
| ◎Address 122, Numbers Of Records For Offset Calculation | 22 |
| ◎Address 123 and 124, DOs Activated Setting | 22 |
| ◎Address 125, PGV within 1 Second | 23 |
| ◎Address 126, PGD within 1 Second | 23 |
| ◎Address 127, Information for Last Earthquake | 23 |
| ◎Address 128, Real-Time STA/LTA | 23 |
| ◎Address 129, Maximum a Axis Acceleration in Earthquake | 23 |
| ◎Address 130, Maximum b Axis Acceleration in Earthquake | 23 |
| ◎Address 131, Maximum c Axis Acceleration in Earthquake | 24 |
| ◎Address 132, Maximum a Axis Acceleration of Vector in Earthquake | 24 |
| ◎Address 133, Maximum b Axis Acceleration of Vector in Earthquake | 24 |
| ◎Address 134, Maximum c Axis Acceleration of Vector in Earthquake | 24 |
| ◎Address 135, PGA Trigger Axis | 24 |
| ◎Address 136, Real-time a AXIS Velocity | 24 |
| ◎Address 137, Real-time a Axis Pd | 24 |
| ◎Address 138, Real-time a Axis tc | 24 |
| ◎Address 139, Pd Trigger Status | 24 |
| ◎Address 140, PGA Within 10 Seconds | 25 |
| ◎Address 141, Earthquake Time – Year | 25 |
| ◎Address 142, Earthquake Time – Month | 25 |
| ◎Address 143, Earthquake Time – Day | 25 |
| ◎Address 144, Earthquake Time – Hour | 25 |
| ◎Address 145, Earthquake Time – Minute | 25 |
| ◎Address 146, Earthquake Time – Second | 25 |
| ◎Address 147, System Time – Year | 25 |
| ◎Address 148, System Time – Month | 25 |
| ◎Address 149, System Time – Day | 25 |
| ◎Address 150, System Time – Hour | 25 |
| ◎Address 151, System Time – Minute | 26 |
| ◎Address 152, System Time – Second | 26 |
| ◎Address 153, Set System Time – Year | 26 |
| ◎Address 154, Set System Time – Month | 26 |
| ◎Address 155, Set System Time – Day | 26 |
| ◎Address 156, Set System Time – Hour | 26 |
| ◎Address 157, Set System Time – Minute | 26 |
| ◎Address 158, Set System Time – Second | 27 |

| | |
|--|----|
| ◎Address 159, Real-time a Axis Displacement | 27 |
| ◎Address 160, a Axis Displacement Warning Threshold | 27 |
| ◎Address 161, PGA Warning Threshold..... | 27 |
| ◎Address 162, Pd Warning Threshold..... | 27 |
| ◎Address 163, Trigger Mode and Low Pass Filter Select | 27 |
| ◎Address 164, Pd Watch Threshold..... | 28 |
| ◎Address 165, Calibration Factor for a Axis at 0 g..... | 28 |
| ◎Address 166, Calibration Factor for b Axis at 0 g..... | 28 |
| ◎Address 167, Calibration Factor for c Axis at 0 g | 28 |
| ◎Address 168, Calibration Factor for a Axis at 1 g..... | 29 |
| ◎Address 169, Calibration Factor for b Axis at 1g..... | 29 |
| ◎Address 170, Calibration Factor for c Axis at 1 g | 29 |
| ◎Address 171~174, NTP Server IP | 30 |
| ◎Address 175, Weekday | 30 |
| ◎Address 176~177, TCP Server 0 IP | 30 |
| ◎Address 178~179, TCP Server 1 IP | 30 |
| ◎Address 180~191, Palert Network Address Setting | 31 |
| ◎Address 192, Available Connections for Host | 31 |
| ◎Address 193, Streaming Output Control..... | 32 |
| ◎Address 194, Palert Modbus RTU Address setting | 34 |
| ◎Address 195, Watch and Warning Period | 34 |
| ◎Address 196, Maximum Acceleration within 1 Second | 34 |
| ◎Address 197, a Axis Displacement Watch Threshold | 34 |
| ◎Address 198, Earthquake Pre-Warning Register | 34 |
| ◎Address 199, Palert Firmware Number | 35 |
| ◎Address 200, Palert Serial Number..... | 35 |
| 4.3. Modbus Related Information for Palert | 35 |
| 4.4. Palert Operation Time Sequence | 36 |
| 4.4.1. Power ON Time Sequence | 36 |
| 4.4.2. Parameter Setting Time Sequence | 36 |
| 4.4.3. Initialization Time Sequence | 37 |
| 4.4.4. STA/LTA Trigger Time Sequence | 37 |
| 4.4.5. Displacement, Pd, and PGA Trigger Time Sequence | 38 |
| Table 1. Earthquake Intensity Table, Central Weather Bureau, Taiwan. | 39 |
| Appendix 1. EEW Paper by Professor Yih-Min Wu., National Taiwan University. | 40 |

| Revisions | | |
|-----------|--|--------|
| Date | Description | Author |
| 20100418 | The first edition 1.00 | Ching |
| 20100429 | Some phrases correction | Ching |
| 20100622 | <ol style="list-style-type: none"> 1. Streaming packet size is increased from 1100 to 1200 bytes. 2. Add DI/O status and EEW register in streaming packet. 3. Modify description for DI/O wiring. 4. Add quit program and FTP update description for address 113. 5. Add Pa, Pv and Pd in streaming packet. 6. Add streaming packet type 300, 1191 and 1192. 7. FTP server IP setting | Ching |

1. Features


Palert, an advanced technology earthquake P wave alarm embedded Pd technology which is developed by Prof. Yih-Min Wu, National Taiwan University. Design to reduce earthquake damage that an alarm can be issued within 3 seconds after P wave is detected if following shock wave is destructive.

Offer four kinds of trigger algorithms Pd, PGA, Displacement and STA/LTA for detect earthquake. The Pd algorithm is developed by Prof. Yih-Min Wu. Please refer to related documents have been published. PGA stands for Peak Ground Acceleration. Palert offers 10 Hz and 20 Hz low pass filter which is selected by user to filter out high frequency components in signal generated by non-earthquake vibration. Component “a” is especially equips with real-time displacement calculation which is able to deploy displacement trigger algorithm in “a” axis. The conventional STA/LTA trigger algorithm is also available on Palert.

Intensity standards both for CWB (Central Weather Bureau, Taiwan) and China (GB/T-17742-2008) are available. Other useful earthquake information is stored and ready for retrieved in Palert. These include trigger time, maximum intensity, maximum acceleration for each component and maximum acceleration in vector. The powerful networking capability features streaming real-time data to hosts; automatically connect to up to 2 servers, NTP (Network Time Protocol) time calibration. With these networking functions Palert is a wonderful front end device for EEW (Earthquake Early Warning) system.

With PC utility it is possible to record earthquake data for research purpose and have voice warning if needed. Two outputs and supports industrial Modbus TCP/RTU communication standard which make Palert an ideal product for earthquake safety control in numerous applications.

2. Application Topology

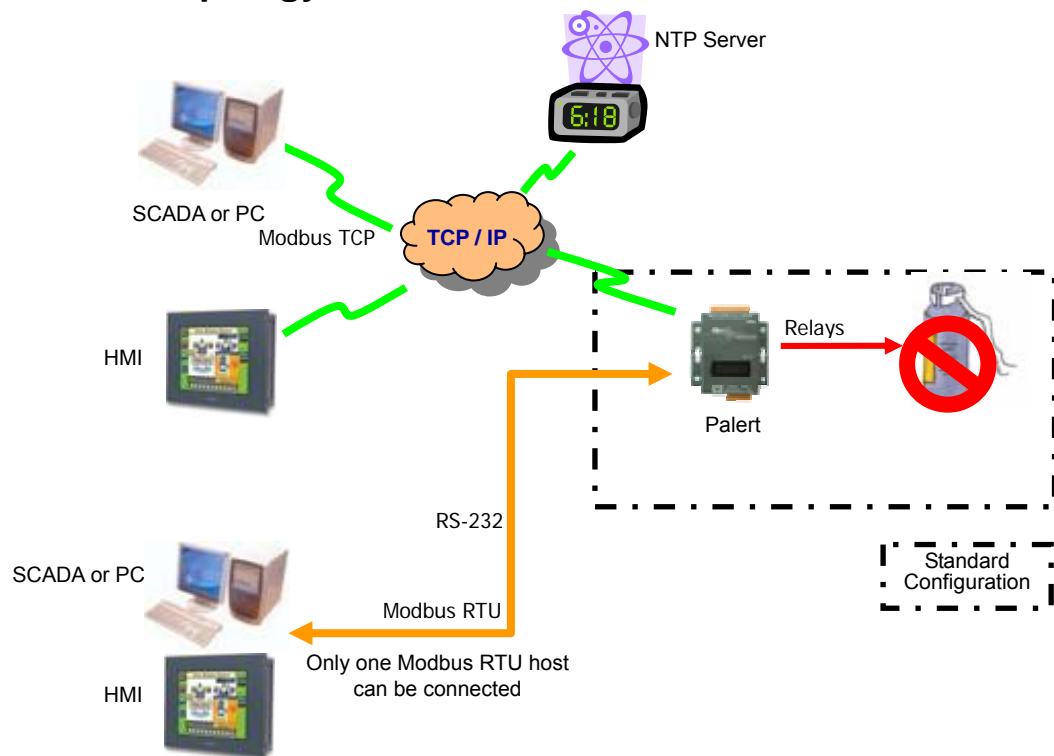

3. Hardware information

3.1. Wiring

| Pin Definition | Description |
|----------------|--|
| GND | Power Ground |
| Vs+ | Power 10~30VDC 300mA |
| D2- | COM2, Modbus RTU (RS-485 D-) |
| D2+ | COM2, Modbus RTU (RS-485 D+) |
| INIT* | For Service only. Please do not connect. |
| TXD1 | COM1 TX |
| RXD1 | COM1 RX |
| RTS1 | COM1 RTS |
| CTS1 | COM1 CTS |
| E1 | Modbus TCP (10 / 100M Ethernet Port) |
| DO PWR | DC5V Output |
| DO0 | Relay Output 0 (Photo MOS Relay, Form A) Normal Open , 0.6A/60VDC |
| DO1 | Relay Output 1 (Photo MOS Relay, Form A) Normal Open , 0.6A/60VDC |
| DO COM | Common for Relay Output 0 and 1. |
| GND | 0V |
| DI0 | Digital Input 0 (LED display will show IP when grounding) |
| DI1 | Digital Input 1(LED display will show last event information when grounding) |
| DI2 | Digital Input 2 (RTD Output Mode) |
| DI3 | Digital Input 3 (Reserved) |

3.2. Information for LED Display

Normal Status

Display will illustrate three kinds of information periodically which are “YYYY.MM.DD WWW”, “hh.mm” and “.ss.”. It will blink if NTP synchronal function is enabled and Palert is unable to synchronize with NTP server.

YYYY : Year

MM : Month

DD : Day

WWW : Weekday

hh : Hour

mm : Minute
ss : Second

Earthquake Detected

Display will illustrate three kinds of information periodically which are maximum intensity, maximum acceleration and what kinds of earthquake trigger algorithms are set. If Palert is configured as CWB intensity based mode then the information is "IIII", "VVVV.V" and "P.d.A.t".

I : Maximum Intensity
VVVV.V : Maximum Acceleration in Gal Unit
P. : Pd Event Triggered
d. : Displacement Event Triggered
A. : PGA Event Triggered
t. : STA/LTA Event Triggered

If Palert is configured as GB/T 17742-2008 intensity based mode then the information is "I", "VV.VVV" and "P.d.A.t".

I : Maximum Intensity
VV.VVV : Maximum Horizontal Acceleration in m/sec² Unit
P. : Pd Event Triggered
d. : Displacement Event Triggered
A. : PGA Event Triggered
t. : STA/LTA Event Triggered

Earthquake Pre-warning Information Sent by Server

When Palert is deployed as an EEW (Earthquake Early Warning) system front end device, it is possible sending EEW information to Palert in order to have earthquake pre-warning time for people. The information is "II.-99".

II : Expected Intensity
-99 : Expected Earthquake Shockwave Arrival Time in Seconds.

Attention! This function is only available when Palert is connected to seismologic server which has advanced seismology program. Please consult your local distributor if you have EEW application requirement. User must be noticed to follow the individual countries earthquake dispatch regulations or laws.

3.3. Digital Inputs Configurations

☉ Reset to Factory Setting

Palert will restore all parameters to factory default setting if all four DIs are grounding.

◎ Display IP Information

When DI0 is grounding Palert will display IP information as “XXX.XXX.XXX.XXX” format.

◎ Display The Last Earthquake Information

Palert will display the last earthquake information when DI1 is grounding. The display format is described as below.

CWB Intensity Based Mode: “YYYY.MM.DD hh.mm.ss I.I.I.I.I VVVV.V”

YYYY : Year

MM : Month

DD : Day

hh : Hour

mm : Minute

ss : Second

I : Maximum Intensity

V : Maximum Acceleration in Gal Unit.

GB/T 17742-2008 Based Mode: “YYYY.MM.DD hh.mm.ss II VV.VVV”

YYYY : Year

MM : Month

DD : Day

hh : Hour

mm : Minute

ss : Second

II : Maximum Intensity

V : Maximum Horizontal Acceleration in m/sec² Unit.

3.4. RTD (Real Time Data stream) Output Control

When DI2 is grounding Palert will enable RTD output function. The data format is described as below.

| Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 | Byte 8 |
|--------|--------|--------|--------|--------|--------|--------|--------|
| 0x0d | a High | a Low | b High | b Low | c High | c Low | 0x0a |

The data output serial port is determined by “autoexec.bat” file in Palert. The communication protocol is “9600, n, 8, 1”. Please refer to next section for more information about “autoexec.bat”. User must be noticed that all DOs will be controlled by RTD serial port and the data are raw without filtered. The DOs control commands are described as below.

| | ON | OFF |
|-----|--------|---------|
| DO0 | #ON0#r | #OFF0#r |

| | | |
|-----|--------|---------|
| DO1 | #ON1#r | #OFF1#r |
|-----|--------|---------|

\r stands for 0x0d

3.5. Parameters for Autoexec.bat

There are two parameters for “autoexec.bat” file for Palert as below.

Example: runexe 2 N

Parameter 1: Modbus RTU Port

Possible options are 1 or 2. RTD output function will be enabled when DI2 is grounding. The RTD serial port is automatically switched to the other port. For this example, Modbus RTU port is 2 and RTD port is 1.



Parameter 2: DHCP Client Enable

The possible options are “Y” and “N”.

Attention! All these two parameters should be maintained by professional with precise setting. Otherwise, it will cause Palert malfunction.







3.6. DOs Wiring and Characteristics

DO is acted just like a switch but with contact capacity as 60V 0.6A. Please refer to wiring diagram as below.

| Output Type | Readback as 1 | Readback as 0 |
|----------------------|---|--|
| | Relay On | Relay Off |
| From A Relay Contact |  |  |

3.7. DIs Wiring

Please refer to DI wiring diagram as below.
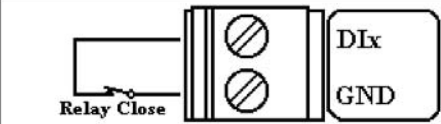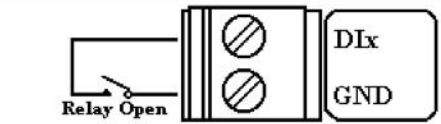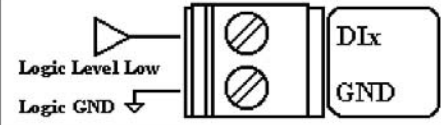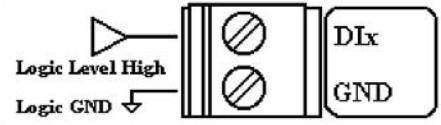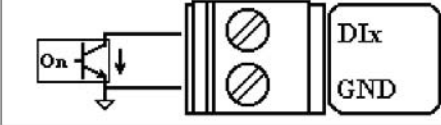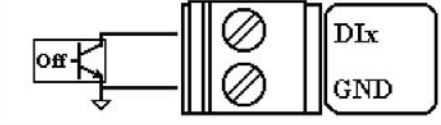
| Input Type | ON State DI value as 1 | OFF State DI value as 0 |
|----------------|---|--|
| Relay Contact |  |  |
| TTL/CMOS Logic |  |  |
| Open Collector |  |  |

3.8. Installation

Due to the earthquake trigger algorithm Palert adapted that a axis should be installed as vertical component. It is recommended to have anti-impact transparent housing covered to avoid artificial impact. A backup battery is also good configuration to prevent power failure.

4. Parameters Setup

The parameters of Palert have been setup optimally. However, due to different installation location and background noise, some adjustments for parameters are necessary. Each function of Palert parameters are described as below.

Please notes that below address are zero based.

4.1. Parameters List

| Palert Modbus Address Mapping Table (400XXX) | | | |
|--|-----|-----------------|---|
| Address | R/W | Label | Description |
| 100 | R | connection_flag | NTP Server Synchronal and Servers Connected Flag |
| 101 | R | a_axis | Real-Time a Axis Acceleration |
| 102 | R | b_axis | Real-Time b Axis Acceleration |
| 103 | R | c_axis | Real-Time c Axis Acceleration |
| 104 | R | vector | Real-Time Vector Acceleration |
| 105 | R | a_offset | a Axis Offset |
| 106 | R | b_offset | b Axis Offset |
| 107 | R | c_offset | c Axis Offset |
| 108 | R | vector_gal_max | Maximum Vector in Earthquake (Unit : gal) |
| 109 | R | intensity_now | Real-Time Intensity |
| 110 | R | intensity_max | Maximum Intensity in Earthquake |
| 111 | R | event | Earthquake Indicator |
| 112 | R | lta_flag | LTA Ready Indicator |
| 113 | W | data_changed | Setup Option (1 as Update, 2 as Write to EEPROM, 4 as Write IP Address Setting to EEPROM, 8 as Update System Time) |
| 114 | RW | time_diff | GMT Time Zone (Taipei is 8) |
| 115 | RW | sta_time | STA Duration (Unit : 100 ms) |
| 116 | RW | lta_time | LTA Duration (Unit : 100 ms) |
| 117 | RW | sta_lta_th | STA/LTA Trigger Threshold |
| 118 | RW | op_mode | GB/T 17742-2008 Mode, DO Control Mode, Intensity Calculated Standard, Servers Connection and NTP Enable, Streaming Enable |
| 119 | R | DIO_status | DI and DO status |
| 120 | RW | event_time | Earthquake Event Sustained Duration (Unit : |

| Palert Modbus Address Mapping Table (400XXX) | | | |
|--|----|---------------------|---|
| | | | second) |
| 121 | RW | pga_watch_threshold | PGA Watch Threshold (Unit: count) |
| 122 | RW | offset_records | Numbers of Records for Offset Calculation |
| 123 | RW | DO0_gal | DO0 Activated Setting (Unit : gal) |
| 124 | RW | DO1_gal | DO1 Activated Setting (Unit : gal) |
| 125 | R | PGV_1S | Peak Ground Velocity (Unit: 0.001 cm/sec) |
| 126 | R | PGD_1S | Peak Ground Displacement (Unit: 0.001 cm) |
| 127 | R | last_event | Information for Last Earthquake |
| 128 | R | sta_lta | Real-Time STA/LTA |
| 129 | R | a_maximum | Maximum a Axis Acceleration in Earthquake |
| 130 | R | b_maximum | Maximum b Axis Acceleration in Earthquake |
| 131 | R | c_maximum | Maximum c Axis Acceleration in Earthquake |
| 132 | R | vector_max_a | Maximum a Axis Acceleration of Vector in Earthquake |
| 133 | R | vector_max_b | Maximum b Axis Acceleration of Vector in Earthquake |
| 134 | R | vector_max_c | Maximum c Axis Acceleration of Vector in Earthquake |
| 135 | RW | pga_trig_axis | PGA Trigger Axis |
| 136 | R | pv_int | Real-Time a Axis Velocity (Unit: 0.001 cm/sec) |
| 137 | R | pd_int | Real-Time a Axis Pd (Unit: 0.001 cm) |
| 138 | R | tc_int | Real-Time a Axis τ_c (Unit: 0.001) |
| 139 | R | pd_flag | Pd Trigger Status |
| 140 | R | pga_10s | PGA Within 10 Seconds (Unit: count) |
| 141 | R | e_year | Earthquake Time – Year |
| 142 | R | e_month | Earthquake Time – Month |
| 143 | R | e_day | Earthquake Time – Day |
| 144 | R | e_hour | Earthquake Time – Hour |
| 145 | R | e_minute | Earthquake Time – Minute |
| 146 | R | e_second | Earthquake Time – Second |
| 147 | R | sys_year | System Time – Year |
| 148 | R | sys_month | System Time – Month |
| 149 | R | sys_day | System Time – Day |
| 150 | R | sys_hour | System Time – Hour |

| Palert Modbus Address Mapping Table (400XXX) | | | |
|---|----|------------------------|--|
| 151 | R | sys_minute | System Time – Minute |
| 152 | R | sys_second | System Time – Second |
| 153 | RW | set_year | Set System Time – Year |
| 154 | RW | set_month | Set System Time – Month |
| 155 | RW | set_day | Set System Time – Day |
| 156 | RW | set_hour | Set System Time – Hour |
| 157 | RW | set_minute | Set System Time – Minute |
| 158 | RW | set_second | Set System Time – Second |
| 159 | R | displacement | Real-Time a Axis Displacement (Unit: 0.001 cm) |
| 160 | RW | disp_warning_threshold | A Axis Displacement Warning Threshold (Unit: 0.001 cm) |
| 161 | RW | pga_warning_threshold | PGA Warning Threshold (Unit: count) |
| 162 | RW | pd_warning_threshold | Pd Warning Threshold (Unit: 0.001 cm) |
| 163 | RW | trig_mode | Trigger Mode and Low Pass Filter Select |
| 164 | RW | pd_watch_threshold | Pd Watch Threshold (Unit: 0.001 cm) |
| 165 | RW | a_0g | Calibration Factor for a Axis at 0 g (Unit: 0.1 mg) |
| 166 | RW | b_0g | Calibration Factor for b Axis at 0 g (Unit: 0.1 mg) |
| 167 | RW | c_0g | Calibration Factor for c Axis at 0 g (Unit: 0.1 mg) |
| 168 | RW | a_1g | Calibration Factor for a Axis at 1 g (Unit: 0.1 mg) |
| 169 | RW | b_1g | Calibration Factor for b Axis at 1 g (Unit: 0.1 mg) |
| 170 | RW | c_1g | Calibration Factor for c Axis at 1 g (Unit: 0.1 mg) |
| 171 | RW | ntp_svr_ip1 | NTP Server IP Address 1 |
| 172 | RW | ntp_svr_ip2 | NTP Server IP Address 2 |
| 173 | RW | ntp_svr_ip3 | NTP Server IP Address 3 |
| 174 | RW | ntp_svr_ip4 | NTP Server IP Address 4 |
| 175 | R | week_day | System Time – Weekday |
| 176 | RW | server0_ip12 | Server0 IP Address 1, 2 |
| 177 | RW | server0_ip34 | Server0 IP Address 3, 4 |
| 178 | RW | server1_ip12 | Server1 IP Address 1, 2 |
| 179 | RW | server1_ip34 | Server1 IP Address 3, 4 |
| 180 | RW | IP1 | Palert IP address |
| 181 | RW | IP2 | Palert IP address |
| 182 | RW | IP3 | Palert IP address |
| 183 | RW | IP4 | Palert IP address |

| Palert Modbus Address Mapping Table (400XXX) | | | |
|---|----|----------------------|--|
| 184 | RW | Subnet mask 1 | Palert IP subnet mask |
| 185 | RW | Subnet mask 2 | Palert IP subnet mask |
| 186 | RW | Subnet mask 3 | Palert IP subnet mask |
| 187 | RW | Subnet mask 4 | Palert IP subnet mask |
| 188 | RW | Gateway 1 | Palert IP gateway |
| 189 | RW | Gateway 2 | Palert IP gateway |
| 190 | RW | Gateway 3 | Palert IP gateway |
| 191 | RW | Gateway 4 | Palert IP gateway |
| 192 | R | sck_remain | Available Connections for TCP Host |
| 193 | RW | stream_output | Streaming Output Control |
| 194 | RW | rtu_address | Palert Modbus RTU Address |
| 195 | RW | light_sound_duration | Watch and Warning Period |
| 196 | R | vector_gal_now | Maximum Acceleration Within 1 Second (Unit: gal) |
| 197 | RW | disp_watch_threshold | a Axis Displacement Watch Threshold |
| 198 | RW | pre-alarm | Earthquake Pre-Warning Register |
| 199 | R | version | Firmware Number |
| 200 | R | serial_no | Palert Serial Number |

4.2. Parameters Description

◎Address 100, NTP Synchronal and Server Connected Flag

bit 0

0: Palert not synchronize with NTP server.

1: Palert has synchronized with NTP server. The synchronal interval is 10 minutes and Palert will try to synchronize with NTP server every 10 seconds if last synchronization failed. The new connection will be established if there is no synchronization within 700 seconds.

Regarding the IP address setting for NTP server please refer to addresses 171 to 174.

bit 1

0: Indicate that there is no connection with server 0.

1: Indicate that connection between server 0 and Palert has established.

Regarding the IP address setting for server 0 please refer to addresses 176 and 177.

bit 2:

0: Indicate that there is no connection with server 1.

1: Indicate that connection between server 1 and Palert has established.

Regarding the IP address setting for server 1 please refer to addresses 178 and 179.

All functions mentioned above will only available when NTP or servers connection is enabled.
Please refer to address 118 for related setting.

◎Address 101, Real-Time a Axis Acceleration

This address stores real-time a axis acceleration, unit in count. One gal is equal to 16.7184 counts. The throughput is 100 samples / second when connected up to 3 hosts in Ethernet environment.

◎Address 102, Real-Time b Axis Acceleration

This address stores real-time b axis acceleration, unit in count. One gal is equal to 16.7184 counts. The throughput is 100 samples / second when connected up to 3 hosts in Ethernet environment.

◎Address 103, Real-Time c Axis Acceleration

This address stores real-time c axis acceleration, unit in count. One gal is equal to 16.7184 counts. The throughput is 100 samples / second when connected up to 3 hosts in Ethernet environment.

◎Address 104, Real-Time Vector Acceleration

This address stores real-time vector acceleration, unit in count. One gal is equal to 16.7184 counts. The throughput is 100 samples / second when connected up to 3 hosts in Ethernet environment. The equation of vector is described as below.

$$Vector = \sqrt{a^2 + b^2 + c^2}$$

◎Address 105, a Axis Offset

This address stores a axis offset compensation value, unit in count, One gal is equal to 16.7184 counts. The zero point output of accelerometer will be affected by installation or some other issues. This value will only calculate at initialization. Palert equips automatic zero algorithm so it is no need to calculate offset after initialization.

Due to installation that a axis will face gravity so there is around -980 gal offset in this axis.

◎Address 106, b Axis Offset

This address stores b axis offset compensation value, unit in count, One gal is equal to 16.7184 counts. The zero point output of accelerometer will be affected by installation or some other issues. This value will only calculate at initialization. Palert equips automatic zero algorithm so it is no need to calculate offset after initialization.

◎Address 107, c Axis Offset

This address stores c axis offset compensation value, unit in count, One gal is equal to 16.7184 counts. The zero point output of accelerometer will be affected by installation or some other issues. This value will only calculate at initialization. Palert equips automatic zero algorithm so it is no need to calculate offset after initialization.

◎Address 108, Maximum Vector in Earthquake

This address stores the maximum vector acceleration in last earthquake, unit as gal. This value will be updated when next earthquake is detected.

This value will be calculated as horizontal vector (GB/T 17742-2008) or tri-axes vector based on the setting on address 118.

◎Address 109, Real-Time Earthquake Intensity

This address stores real-time intensity as grade from 0 to 7 based on CWB standard (Central Weather Bureau, Taiwan) or from 0 to 11 based on GB/T 17742-2008 standard (China). This number will only meaningful when earthquake indicator (address 111) is set. Palert calculates vector or absolute axes acceleration to determine equivalent earthquake intensity. Please refer to address 118 for related setting.

Due to there is no definition for intensity less equal 4 in GB/T 17742-2008. So Palert uses below levels do determine intensity.

- 1 : $\leq 0.008 \text{ m/sec}^2$
- 2 : $\leq 0.022 \text{ m/sec}^2$
- 3 : $\leq 0.080 \text{ m/sec}^2$
- 4 : $\leq 0.220 \text{ m/sec}^2$

©Address 110, Maximum Intensity in Earthquake

This address stores the maximum intensity of the last earthquake, unit as grade form 0 to 7 based on CWB standard (Central Weather Bureau, Taiwan) or from 0 to 11 based on GB/T 17742-2008 standard. Please refer to address 118 for detail setting.

©Address 111, Earthquake Indicator

Related bits of this address will be set correspond to earthquake detected by certain trigger algorithms; otherwise the value will be 0 when there is no earthquake detected by trigger algorithms.

When related bits are set, the time needed to clear these bits is defined at address 120.

bit 0: a axis Displacement triggered.

bit 1: Pd triggered.

bit 2: PGA triggered.

bit 3: STA/LTA triggered.

©Address 112, LTA Ready Indicator

LTA stands for Long Time Average, which is average of vector in specified long time period.

The opposing parameter is STA, which stands for Short Time Average. It will issue earthquake signal when STA divide LTA is great equal to STA/LTA threshold (address 117) and STA/LTA earthquake trigger algorithm is set (address 163 bit 3 is set).

Palert needs enough time to accumulate enough data for LTA calculation. This LTA Ready Indicator will become 1 when Palert LTA calculation is completed. In other word, Palert STA/LTA earthquake detecting algorithm can function only this Indicator is 1.

©Address 113, Setup Parameters

Write proper value to this address to refresh Palert when change any parameters. The available setup options are described as below.

- 2 - Update and write parameters into EEPROM and force Palert to restart.
- 4 - Update and write Palert its own TCP/IP settings into EEPROM and force Palert to restart.
- 8 - Update and write system clock. Palert will use time information stored in addresses 153 to

158 to update system RTC.

128 – Force Palert to quit program and entering console mode. Caution! This procedure is only for firmware upgrade.

384 – Force Palert to upgrade firmware from SANLIEN FTP server.

©Address 114, Time Zone

This address stores the GMT time zone information for NTP time calibration, for example, Taipei is GMT + 8. It is no function when NTP service is disabled.

©Address 115, STA Duration

STA stands for Short Time Average, which is average of vector in specified short time period. The opposing parameter is LTA, which stands for Long Time Average. It will issue earthquake signal when STA divide LTA is great equal to STA/LTA threshold (address 117) and STA/LTA earthquake trigger algorithm is set (address 163 bit 3 is set).

This address represents the duration of STA in 100ms unit. The factory setting of this value is 20 which mean 2 seconds. The larger number the less false trigger is. The maximum value is 1 / 2 of LTA.

©Address 116, LTA Duration

LTA stands for Long Time Average, which is average vector in specified long time period. The opposing parameter is STA, which stands for Short Time Average. It will issue earthquake signal when STA divide LTA is great equal to STA/LTA threshold (address 117) and STA/LTA earthquake trigger algorithm is set (address 163 bit 3 is set).

This address represents the duration of LTA in 100ms unit. The factory setting of this value is 800 which mean 80 seconds. The Larger number the more sensitive trigger is. The maximum number of LTA is 2000 which means 200 seconds.

©Address 117, STA/LTA Trigger Threshold

Palert uses STA/LTA as one of earthquake detecting algorithms. It will issue earthquake signal (address 111 bit 3) when STA/LTA trigger algorithm is enabled (address 163 bit 3 is set) and STA divide LTA (Address 128) is great equal to this threshold (The factory preset value is 3). Regarding the DOs activities when earthquake signal is set please refer to address 123 and 124.

©Address 118, Operation Mode

bit 0: Intensity calculation standard.

0: CWB (Taiwan) standard.

1: GB/T 17742-2008 (China) standard.

bit 1: GAS_mode

0: Standard DOs control mode. During this mode, The DOs turn on time will be determined by which algorithm is triggered. Please refer to addresses 120, 121, 123, 124, 161, 162, 163, 164 and 195.

1: DOs will only turn on for 2 seconds when earthquake signal is set. This is suitable for gas valve control.

bit 2: CWB Intensity calculation mode.

0: Intensity is calculated by maximum acceleration in axes.

1: Intensity is calculated by vector.

bit 3: Server 0 connection enable.

0: Disable server 0 connections.

1: Enable server 0 connections.

Palert supports 2 servers connection. By enable this function Palert could automatically connect to server 0 which are defined at addresses 176 and 177. This is very useful when Palert is installed at environment with no real IP. It is also the must function for EEW.

bit 4: NTP time calibration enable.

0: Disable NTP function.

1: Enable NTP function.

Palert equips NTP function which can automatically calibrate its system time every 10 minutes with NTP server which IP is specified at addresses from 171 to 174.

bit 6: Server 1 connection enable.

0: Disable server 1 connections.

1: Enable server 1 connections.

Palert supports 2 servers connection. By enable this function Palert could automatically connect to server 1 which are defined at addresses 178 and 179. This is very useful when Palert is installed at environment with no real IP. It is also the must function for EEW.

©Address 119, DI/Os Status

The DI/Os status will be updated every second. High byte represents DIs and low byte as DOs. There are 4 DIs map from bit 8 to bit 11 and 2 DOs map from bit 0 to bit 1. It is also possible to use Modbus DI and DO commands to read these DI/Os status which their addresses are begin from 100.

©Address 120, Earthquake Event Sustained Duration

When earthquake is detected, Palert will enter earthquake operation mode. Below describe tasks performed during this stage.

- Related earthquake trigger algorithm indicators will be set to 1 (Address 111).
- Maximum acceleration, intensity and time will be update and store in real-time.
- Determining of turn-on or turn-off for both two DOs when use only STA/LTA trigger algorithm.
- Counting down the earthquake event duration timer. Timer will be reset if maximum acceleration occurred. Palert will return to normal operation mode when time is up. This address stores the timer value in second (The factory preset value is 30). Please refer to 4.4.4 earthquake time sequence.

©Address 121, PGA Watch Threshold

This address stores PGA (Peak Ground Acceleration) watch threshold with unit in count. One gal is equal to 16.7184 counts. The recommend value is 67 counts (4 gals). An earthquake signal will be set when PGA triggers is enabled (address 163 bit 2) and PGA is great and equal to this threshold. DO0 also will be enabled during this stage. Please refer to address 123 and 124 for more detail.

©Address 122, Numbers Of Records For Offset Calculation

This address stores the number of records to be averaged for offset calculation during initialization (The factory preset value is 200).

©Address 123 and 124, DOs Activated Setting

These addresses store the activated acceleration threshold for DOs when there is only STA/LTA trigger algorithm enabled. The unit is gal and default setting for DO0 is 10 and DO1 is 50.

Please refer to the following table for more detail about DOs activity. The numbers with under line shown on this table are addresses.

| | DO0 | | DO1 | |
|---|-------------------------|--|-------------------------|-----------------------------|
| DO Status Trigger Mode | ON | OFF | ON | OFF |
| Displacement Trigger <u>163</u> bit 0 | <u>159</u> > <u>197</u> | Timer = <u>195</u> High byte OR DO1 ON | <u>159</u> > <u>160</u> | Timer = <u>195</u> Low byte |
| Pd Trigger <u>163</u> bit 1 | <u>137</u> > <u>164</u> | Timer = <u>195</u> High byte OR DO1 ON | <u>137</u> > <u>162</u> | Timer = <u>195</u> Low byte |

| | DO0 | | DO1 | |
|-------------------------------------|--|--|--|-----------------------------|
| DO Status Trigger Mode | ON | OFF | ON | OFF |
| PGA Trigger <u>163</u> bit 2 | PGA > <u>121</u> | Timer = <u>195</u> High byte OR DO1 ON | PGA > <u>161</u> | Timer = <u>195</u> Low byte |
| STA/LTA Trigger <u>163</u> bit 3 | <u>112</u> = 1 AND <u>128</u> > <u>117</u> AND <u>108</u> > <u>123</u> | Timer = <u>120</u> OR DO1 ON | <u>112</u> = 1 AND <u>128</u> > <u>117</u> AND <u>108</u> > <u>124</u> | Timer = <u>120</u> |

©Address 125, PGV within 1 Second

This address stores the maximum real-time three axes PGV (Peak Ground Velocity) within one second. The unit is 0.001 cm/second.

©Address 126, PGD within 1 Second

This address stores the maximum real-time three axes PGD (Peak Ground Displacement) within one second. The unit is 0.001 cm.

©Address 127, Information for Last Earthquake

This address stores the last earthquake triggered information which is the copy of address 111.

©Address 128, Real-Time STA/LTA

Palert uses STA/LTA as one of earthquake detecting algorithms. It will issue earthquake signal (address 111 bit 3) when STA/LTA trigger algorithm is enabled (address 163 bit 3 is set) and this value is great equal to STA/LTA threshold (address 117).

Regarding the DOs activities when earthquake signal is set please refer to address 123 and 124 for more detail.

©Address 129, Maximum a Axis Acceleration in Earthquake

Palert will store the information for maximum acceleration during last earthquake. This address stores the maximum acceleration in a axis, unit in count. One gal is equal to 16.7184 counts.

©Address 130, Maximum b Axis Acceleration in Earthquake

Palert will store the information for maximum acceleration during last earthquake. This address stores the maximum acceleration in b axis, unit in count. One gal is equal to 16.7184 counts.

©Address 131, Maximum c Axis Acceleration in Earthquake

Palert will store the information for maximum acceleration during last earthquake. This address stores the maximum acceleration in c axis, unit in count. One gal is equal to 16.7184 counts.

©Address 132, Maximum a Axis Acceleration of Vector in Earthquake

Palert will store the information for maximum acceleration during last earthquake. This address stores the a component acceleration in the maximum vector, unit in count. One gal is equal to 16.7184 counts.

©Address 133, Maximum b Axis Acceleration of Vector in Earthquake

Palert will store the information for maximum acceleration during last earthquake. This address stores the b component acceleration in the maximum vector, unit in count. One gal is equal to 16.7184 counts.

©Address 134, Maximum c Axis Acceleration of Vector in Earthquake

Palert will store the information for maximum acceleration during last earthquake. This address stores the c component acceleration in the maximum vector, unit in count. One gal is equal to 16.7184 counts.

©Address 135, PGA Trigger Axis

This address stores the PGA trigger axis when PGA trigger is enabled and PGA earthquake signal is set. 1 as a axis triggered, 2 as b axis triggered and 3 as c axis triggered, 0 as none.

©Address 136, Real-time a AXIS Velocity

This address stores the real-time a axis velocity which is integrated from a axis acceleration. The unit is 0.001 cm/second.

©Address 137, Real-time a Axis Pd

This address stores the real-time a axis Pd, unit in 0.001 cm. There is a very high possibility when P wave is detected and Pd is great equal to 0.3 cm the following S wave will be very destructive (According to the research of Prof. Yih-Min, Wu. NTU.). Please refer to appendix 1 for more information about Pd.

©Address 138, Real-time a Axis τ_c

This address stores the real-time a axis τ_c . Please refer to appendix 1 for more information about Pd.

©Address 139, Pd Trigger Status

This address stores the Pd trigger algorithm working status.

bit 4: P wave detected.

bit 5: P wave detected.

bit 6: Pd is greater and equal to Pd watch threshold.

bit 7: Pd is greater and equal to Pd warning threshold.

◎Address 140, PGA Within 10 Seconds

This address stores the PGA within 10 seconds with unit in count. One gal is equal to 16.7184 counts.

◎Address 141, Earthquake Time – Year

This address stores the last earthquake happened time, year.

◎Address 142, Earthquake Time – Month

This address stores the last earthquake happened time, month.

◎Address 143, Earthquake Time – Day

This address stores the last earthquake happened time, day.

◎Address 144, Earthquake Time – Hour

This address stores the last earthquake happened time, hour.

◎Address 145, Earthquake Time – Minute

This address stores the last earthquake happened time, minute.

◎Address 146, Earthquake Time – Second

This address stores the last earthquake happened time, second.

◎Address 147, System Time – Year

This address indicates the Palert system time, year.

◎Address 148, System Time – Month

This address indicates the Palert system time, month.

◎Address 149, System Time – Day

This address indicates the Palert system time, day.

◎Address 150, System Time – Hour

This address indicates the Palert system time, hour.

©Address 151, System Time – Minute

This address indicates the Palert system time, minute.

©Address 152, System Time – Second

This address indicates the Palert system time, second.

©Address 153, Set System Time – Year

Although Palert embedded with NTP function, user still could use addresses from 153 to 158 to set system time. This address stores the information for set system time, which is year. Palert will update its RTC (system time) by taking time information stored in addresses from 153 to 158 when address 113 is set to 8.

©Address 154, Set System Time – Month

Although Palert embedded with NTP function, user still could use addresses from 153 to 158 to set system time. This address stores the information for set system time, which is month. Palert will update its RTC (system time) by taking time information stored in addresses from 153 to 158 when address 113 is set to 8.

©Address 155, Set System Time – Day

Although Palert embedded with NTP function, user still could use addresses from 153 to 158 to set system time. This address stores the information for set system time, which is day. Palert will update its RTC (system time) by taking time information stored in addresses from 153 to 158 when address 113 is set to 8.

©Address 156, Set System Time – Hour

Although Palert embedded with NTP function, user still could use addresses from 153 to 158 to set system time. This address stores the information for set system time, which is hour. Palert will update its RTC (system time) by taking time information stored in addresses from 153 to 158 when address 113 is set to 8.

©Address 157, Set System Time – Minute

Although Palert embedded with NTP function, user still could use addresses from 153 to 158 to set system time. This address stores the information for set system time, which is minute. Palert will update its RTC (system time) by taking time information stored in addresses from 153 to 158 when address 113 is set to 8.

©Address 158, Set System Time – Second

Although Palert embedded with NTP function, user still could use addresses from 153 to 158 to set system time. This address stores the information for set system time, which is second. Palert will update its RTC (system time) by taking time information stored in addresses from 153 to 158 when address 113 is set to 8.

©Address 159, Real-time a Axis Displacement

This address stores the real-time a axis displacement, unit in 0.001 cm. It is double integrated from a axis acceleration and filter by 0.075 Hz high pass filter.

©Address 160, a Axis Displacement Warning Threshold

This address stores a axis warning threshold, unit in 0.001 cm. The recommended setting is 0.35 cm. The earthquake signal will be set (address 111 bit 0) when displacement trigger algorithm is enabled (address 163 bit 0) and displacement (address 159) is great equal to this threshold. Please refer to addresses 123 and 124 for more information regarding to DOs activity during this stage.

©Address 161, PGA Warning Threshold

This address stores PGA warning threshold, unit in count. The recommended setting is 418 counts (25 gals). The earthquake signal will be set (address 111 bit 2) when PGA trigger algorithm is enabled (Address 163 bit 2) and PGA is great equal to this threshold. Please refer to addresses 123 and 124 for more information regarding to DOs activity during this stage.

©Address 162, Pd Warning Threshold

This address stores Pd warning threshold, unit in 0.001 cm. The recommended setting is 0.3 cm. The earthquake signal will be set (address 111 bit 1) when Pd trigger algorithm is enabled (Address 163 bit 1) and Pd (address 137) is great equal to this threshold. Please refer to addresses 123 and 124 for more information regarding to DOs activity during this stage.

©Address 163, Trigger Mode and Low Pass Filter Select

Palert equipped 4 kinds of earthquake trigger algorithm as below. The recommend trigger algorithms are Pd and STA/LTA.

bit 0: Displacement trigger enable.

bit 1: Pd trigger enable.

bit 2: PGA trigger enable.

bit 3: STA/LTA trigger enable.

bit 7: Low pass filter selector, 0 as 10 Hz, 1 as 20 Hz.

STA/LTA trigger algorithm is the only one needs to wait for the LTA flag is ready (address 112).

Other trigger algorithms are able to detect earthquake right after offset calculation.

◎Address 164, Pd Watch Threshold

This address stores Pd watch threshold, unit in 0.001 cm. The recommended setting is 0.15 cm. The earthquake signal will be set (address 111 bit 1) when Pd trigger algorithm is enabled (Address 163 bit 1) and Pd (address 137) is great equal to this threshold. Please refer to addresses 123 and 124 for more information regarding to DOs activity during this stage.

◎Address 165, Calibration Factor for a Axis at 0 g

Palert is calibrated at factory already, so it is not recommend for user to change these calibration factors stored in addresses 165 to 170.

Address 165 stores the zero g calibration factor for a axis. Below describe the calibration procedures.

- a. Align Palert a axis horizontally.
- b. Write 0 to this address and force Palert into initiation.
- c. Find out a axis offset value and write this value by 10 times. For example, write 102 into this address if offset value is 10.2 mg.
- d. Check if offset value is near by 0.

Caution! Any change of this address may trigger earthquake signal, so please make sure Palert disconnect with other system before you make above procedures.

◎Address 166, Calibration Factor for b Axis at 0 g

Palert is calibrated at factory already, so it is not recommend for user to change these calibration factors stored in addresses 165 to 170.

Address 166 stores the zero g calibration factor for b axis. Below describe the calibration procedures.

- a. Align Palert b axis horizontally.
- b. Write 0 to this address and force Palert into initiation.
- c. Find out b axis offset value and write this value by 10 times. For example, write 102 into this address if offset value is 10.2 mg.
- d. Check if offset value is near by 0.

Caution! Any change of this address may trigger earthquake signal, so please make sure Palert disconnect with other system before you make above procedures.

◎Address 167, Calibration Factor for c Axis at 0 g

Palert is calibrated at factory already, so it is not recommend for user to change these calibration factors stored in addresses 165 to 170.

Address 167 stores the zero g calibration factor for c axis. Below describe the calibration

procedures.

- a. Align Palert c axis horizontally.
- b. Write 0 to this address and force Palert into initiation.
- c. Find out c axis offset value and write this value by 10 times. For example, write 102 into this address if offset value is 10.2 mg.
- d. Check if offset value is near by 0.

Caution! Any change of this address may trigger earthquake signal, so please make sure Palert disconnect with other system before you make above procedures.

©Address 168, Calibration Factor for a Axis at 1 g

Palert is calibrated at factory already, so it is not recommend for user to change these calibration factors stored in addresses 165 to 170.

Address 168 stores the 1g calibration factor for a axis. Below describe the calibration procedures.

- a. Align Palert a axis vertically.
- b. Write 10000 to this address and force Palert into initiation.
- c. Find out a axis offset value and write this value by 10 times. For example, write 10208 into this address if offset value is 1020.8 mg.
- d. Check if real-time value is near by 1 g.

Caution! Any change of this address may trigger earthquake signal, so please make sure Palert disconnect with other system before you make above procedures.

©Address 169, Calibration Factor for b Axis at 1g

Palert is calibrated at factory already, so it is not recommend for user to change these calibration factors stored in addresses 165 to 170.

Address 169 stores the 1g calibration factor for b axis. Below describe the calibration procedures.

- a. Align Palert b axis vertically.
- b. Write 10000 to this address and force Palert into initiation.
- c. Find out b axis offset value and write this value by 10 times. For example, write 10208 into this address if offset value is 1020.8 mg.
- d. Check if offset value is near by 1g.

Caution! Any change of this address may trigger earthquake signal, so please make sure Palert disconnect with other system before you make above procedures.

©Address 170, Calibration Factor for c Axis at 1 g

Palert is calibrated at factory already, so it is not recommend for user to change these calibration factors stored in addresses 165 to 170.

Address 170 stores the 1g calibration factor for c axis. Below describe the calibration procedures.

- e. Align Palert c axis vertically.
- f. Write 10000 to this address and force Palert into initiation.
- g. Find out c axis offset value and write this value by 10 times. For example, write 10208 into this address if offset value is 1020.8 mg.
- h. Check if offset value is near by 1 g.

Caution! Any change of this address may trigger earthquake signal, so please make sure Palert disconnect with other system before you make above procedures.

◎Address 171~174, NTP Server IP

Palert equipped with NTP function which could calibrate its system time via network time server. These addresses store NTP server IP information (Factory preset value is 192.43.244.18 which is time.nist.gov).

When these addresses are changed user must also write 2 into address 113 to effect the changes.

◎Address 175, Weekday

This address indicates the weekday of Palert system time. The number is from 1 to 6 stands for Monday to Saturday, 7 for Sunday.

◎Address 176~177, TCP Server 0 IP

Palert has ability to connect with servers automatically. This is an advantage for Palert at the site without real IP. It is also the must function for EEW system. When server 0 connections enable is set (address 118 bit 3). Palert will try to connect to server 0 at all time. The connection status will be indicated at address 100 bit 1. Palert will also send its serial number in ASCII format to the server when connection is established.

These addresses store TCP server 0 IP information as the order ip1.ip2.ip3.ip4 as below.

ip1: Address 176 high byte

ip2: Address 176 low byte

ip3: Address 177 high byte

ip4: Address 177 low byte

When these addresses are changed user must also write 2 into address 113 to effect the changes.

◎Address 178~179, TCP Server 1 IP

Palert has ability to connect with servers automatically. This is an advantage for Palert at the

site without real IP. It is also the must function for EEW system. When server 1 connections enable is set (address 118 bit 6). Palert will try to connect to server 1 at all time. The connection status will be indicated at address 100 bit 2. Palert will also send its serial number in ASCII format to the server when connection is established.

These addresses store TCP server 1 IP information as the order ip1.ip2.ip3.ip4 as below.

ip1: Address 178 high byte

ip2: Address 178 low byte

ip3: Address 179 high byte

ip4: Address 179 low byte

When these addresses are changed user must also write 2 into address 113 to effect the changes.

Server 1 IP address is also the FTP server IP for firmware upgrade. Once user writes 0x180 into address 113 will force Palert to upgrade firmware from FTP server.

©Address 180~191, Palert Network Address Setting

These addresses store IP information for Palert. User must write 4 into address 113 when there is any change for these addresses.

The factory preset values are described as below.

IP: 192.168.255.1 (Address 180 to 183)

Mask: 255.255.0.0 (Address 184 to 187)

Gateway: 192.168.0.1 (Address 188 to 191)

User could ground DI0 in order to display Palert IP information from 7 segments LED. Please maintain Palert at steady status in case of Palert displays earthquake trigger information.

Attention! Improper network address setting may cause Palert malfunction.

©Address 192, Available Connections for Host

Palert offers 3 TCP connections for host simultaneously. This address indicates remain connections.

©Address 193, Streaming Output Control

Palert will stream out data packet continually every second when user writes 1 or 2 into this address. Palert will also send out one additional packet at the moment when below conditions is satisfied.

1. P wave is detected.
2. Exactly three seconds after P wave.
3. Pd great equal Pd watch threshold if Pd trig algorithm is enabled.
4. Pd great equal Pd warning threshold if Pd trig algorithm is enabled.

The packet data format is depending on the data 1 or 2. Palert will stop streaming when user writes 0 to this address. Please notice that these kinds of data packets are not standard Modbus protocol so it is not possible to be received by standard PLC. Streaming output is also the must function for EEW system. Regarding to the format of these packets data are describe as below.

| Mode 1 | Mode 2 | Integer Number | Description (Value in parentheses indicate Modbus address) |
|-----------|-----------|-------------------|--|
| ▲ | ▲ | 0 | Packet type 1: Normal streaming packet 119: P wave streaming packet 300: Pd within 3 seconds after P wave 1191: Pd watch streaming packet 1192: Pd warning streaming packet |
| ▲ | ▲ | 1 | Event flag (111) |
| ▲ | ▲ | 2 | system time-year (147) |
| ▲ | ▲ | 3 | system time-month (148) |
| ▲ | ▲ | 4 | system time-day (149) |
| ▲ | ▲ | 5 | system time-hour (150) |
| ▲ | ▲ | 6 | system time-minute (151) |
| ▲ | ▲ | 7 (high byte) | system time-second (152) |
| ▲ | ▲ | 7 (low byte) | system time-10 msecond |
| ▲ | ▲ | 8 | event time-year (141) |
| ▲ | ▲ | 9 | event time-month (142) |
| ▲ | ▲ | 10 | event time-day (143) |
| ▲ | ▲ | 11 | event time-hour (144) |
| ▲ | ▲ | 12 | event time-minute (145) |
| ▲ | ▲ | 13 (high byte) | event time-second (146) |
| ▲ | ▲ | 13 (low byte) | event time-10 msecond |
| ▲ | ▲ | 14 | Serial number (200) |
| ▲ | ▲ | 15 | Displacement watch threshold (197) |

| Mode 1 | Mode 2 | Integer Number | Description (Value in parentheses indicate Modbus address) |
|--------|--------|----------------|--|
| ▲ | ▲ | 16 | PGV within 1 second (125) |
| ▲ | ▲ | 17 | PGD within 1 second (126) |
| ▲ | ▲ | 18 | PGA within 10 seconds (140) |
| ▲ | ▲ | 19 | PGA trig axis (135) |
| ▲ | ▲ | 20 | Pd warning threshold (162) |
| ▲ | ▲ | 21 | PGA warning threshold (161) |
| ▲ | ▲ | 22 | Displacement warning threshold (160) |
| ▲ | ▲ | 23 | Pd flag (139) |
| ▲ | ▲ | 24 | Pd watch threshold (164) |
| ▲ | ▲ | 25 | PGA watch threshold (121) |
| ▲ | ▲ | 26 | Intensity now (109) |
| ▲ | ▲ | 27 | Intensity maximum (110) |
| ▲ | ▲ | 28 | PGA within 1 second |
| ▲ | ▲ | 29 | PGA axis within 1 second (138) |
| ▲ | ▲ | 30 | τc (138) |
| ▲ | ▲ | 31 | Trig mode (163) |
| ▲ | ▲ | 32 | Operation Mode (118) |
| ▲ | ▲ | 33 | Durations for watch and warning (195) |
| ▲ | ▲ | 34 | Firmware version |
| ▲ | ▲ | 35 ~ 38 | IP Address (180~183) |
| ▲ | ▲ | 39 ~ 40 | Server 0 IP address (176~177) |
| ▲ | ▲ | 41 ~ 42 | Server 1 IP address (178~179) |
| ▲ | ▲ | 43 ~ 46 | NTP server IP address (171~174) |
| ▲ | ▲ | 47 | Sockets remain (192) |
| ▲ | ▲ | 48 | Connection flag (100) |
| ▲ | ▲ | 49 | D I/O status (119) |
| ▲ | ▲ | 50 | EEW register (198) |
| ▲ | ▲ | 51 | Pd in a axis (137) |
| ▲ | ▲ | 52 | Pv in a axis |
| ▲ | ▲ | 53 | Pa in a axis |
| ▲ | | 100 | a axis Acceleration of Record 1 |
| ▲ | | 101 | b axis Acceleration of Record 1 |
| ▲ | | 102 | c axis Acceleration of Record 1 |
| ▲ | | 103 | Pd of Record 1 |
| ▲ | | 104 | Displacement of Record 1 |

| Mode 1 | Mode 2 | Integer Number | Description (Value in parentheses indicate Modbus address) |
|-----------|-----------|-------------------|---|
| ▲ | | .. | .. |
| ▲ | | 595 | a axis Acceleration of Record 100 |
| ▲ | | 596 | b axis Acceleration of Record 100 |
| ▲ | | 597 | c axis Acceleration of Record 100 |
| ▲ | | 598 | Pd of Record 100 |
| ▲ | | 599 | Displacement of Record 100 |

Notes:

- Integer format is low byte at first and follow with high byte.
- This streaming function is only available for Modbus TCP.

◎Address 194, Palert Modbus RTU Address setting

Factory preset value is 101. The possible number is from 1 to 255. Please write 2 into address 113 when there is change in this address.

◎Address 195, Watch and Warning Period

This address stores the watch and warning period for displacement, Pd and PGA trigger algorithms. High byte as watch time in second (recommended value is 10). Low byte as warning time in second (recommended value is 30).

◎Address 196, Maximum Acceleration within 1 Second

This address stores the maximum acceleration within 1 second, unit in gal.

◎Address 197, a Axis Displacement Watch Threshold

This address stores the displacement watch threshold for a axis, unit in 0.001 cm. The recommended value is 0.2 cm. The earthquake signal will be set (address 111 bit 0) when displacement trigger algorithm is enabled (address 163 bit 0) and real-time a axis displacement (address 159) is great equal to this threshold. Please refer to addresses 123 and 124 for more information regarding to DOs activity during this stage.

◎Address 198, Earthquake Pre-Warning Register

This address is designed for received EEW information from EEW server. High byte as predict intensity and low byte as remain seconds for shock wave arrive. When there are data write into this address, two DOs will be turned on and 7 segments LED will display intensity and count down seconds. It will display local earthquake information immediately if Palert detects

earthquake later.

This function only available when Palert is integrated with EEW system and with seismologist supports. It is also important that the system must obey the individual countries regulations or laws for dispatch earthquake information.

©Address 199, Palert Firmware Number

This address indicates the Palert firmware version.

©Address 200, Palert Serial Number

This Address stores the serial number of Palert. User could change this serial number based on the application needed. The possible range is from 1 to 65535.

4.3. Modbus Related Information for Palert

Palert supports Modbus TCP and Modbus RTU simultaneously. ID will be 1 when connected by Modbus TCP. The Modbus RTU communication parameters is "19200, n, 8, 1". Palert supports Modbus function 1, 2, 3, 6 and 16.

Example: Set STA as 2.5 seconds by using Modbus TCP.

2.5 seconds equal to 25 * 0.1 seconds, 25 = 0x0019. Function code is 6 and the register address is 114 = 0x0072 (Palert uses zero based system). The command set will be like this one as below.

| TID (hex) | PID (hex) | Field Length (hex) | UID (hex) | FC (hex) | Reg_Offset. (hex) | Value (hex) |
|-----------|-----------|--------------------|-----------|----------|-------------------|-------------|
| 0001 | 0000 | 0006 | 01 | 06 | 0072 | 0019 |

TID: Transaction Identifier;


PID: Protocol Identifier (Protocol Length);

UID: Unit Identifier;


FC: Function Code

4.4. Palert Operation Time Sequence


4.4.1. Power ON Time Sequence

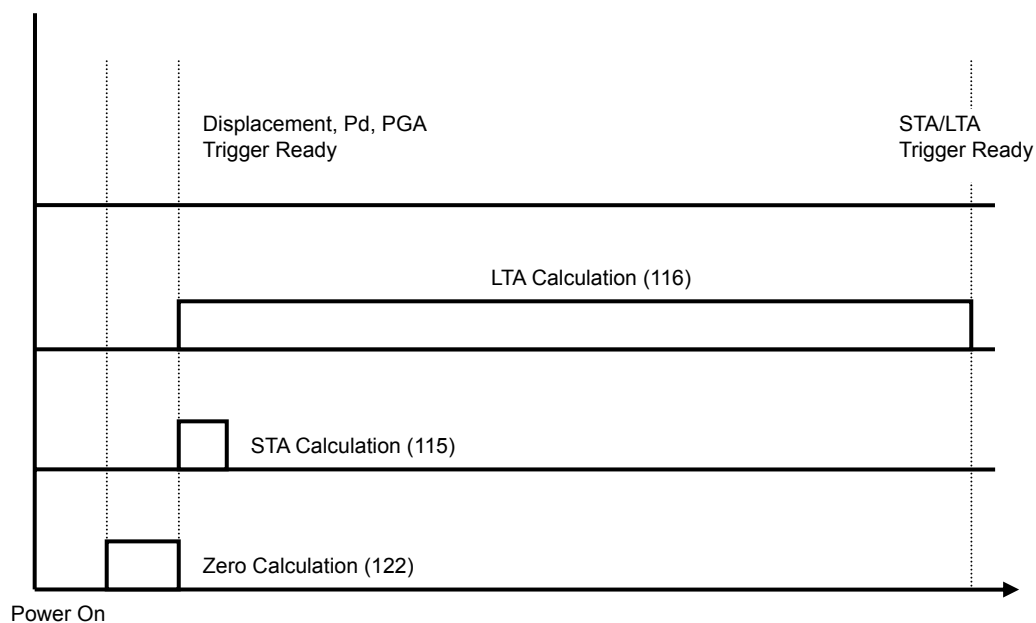


4.4.2. Parameter Setting Time Sequence

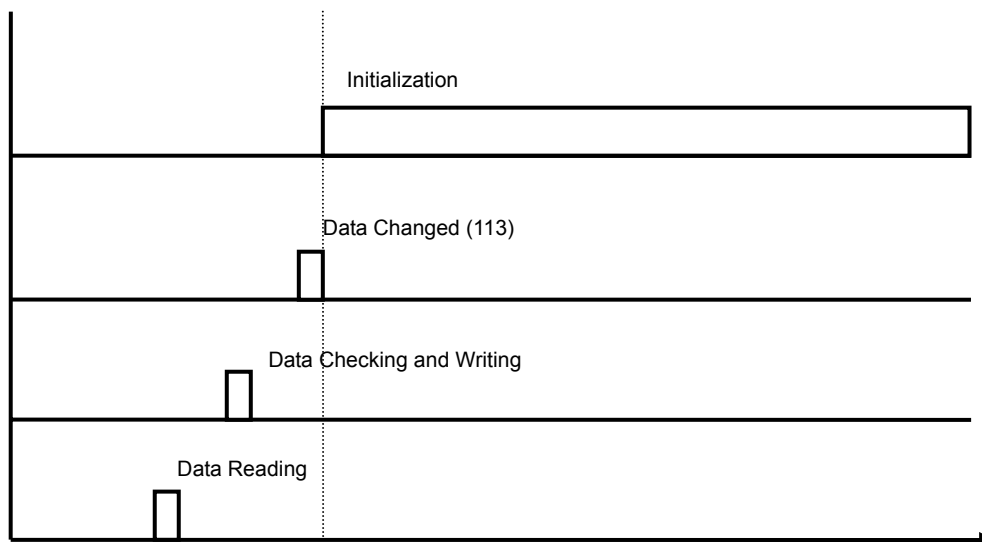

4.4.3. Initialization Time Sequence

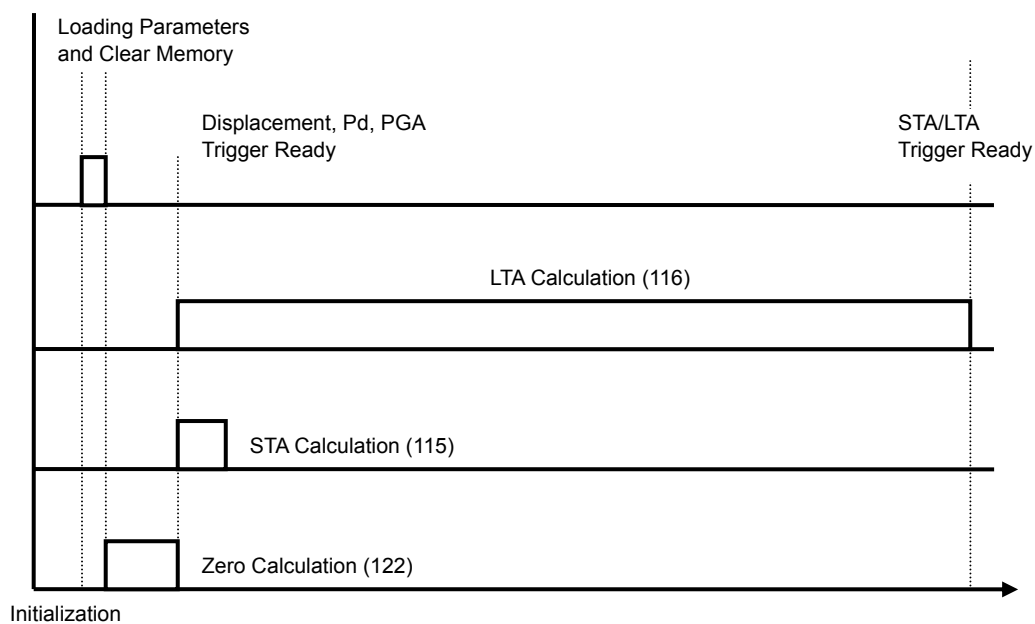

4.4.4. STA/LTA Trigger Time Sequence

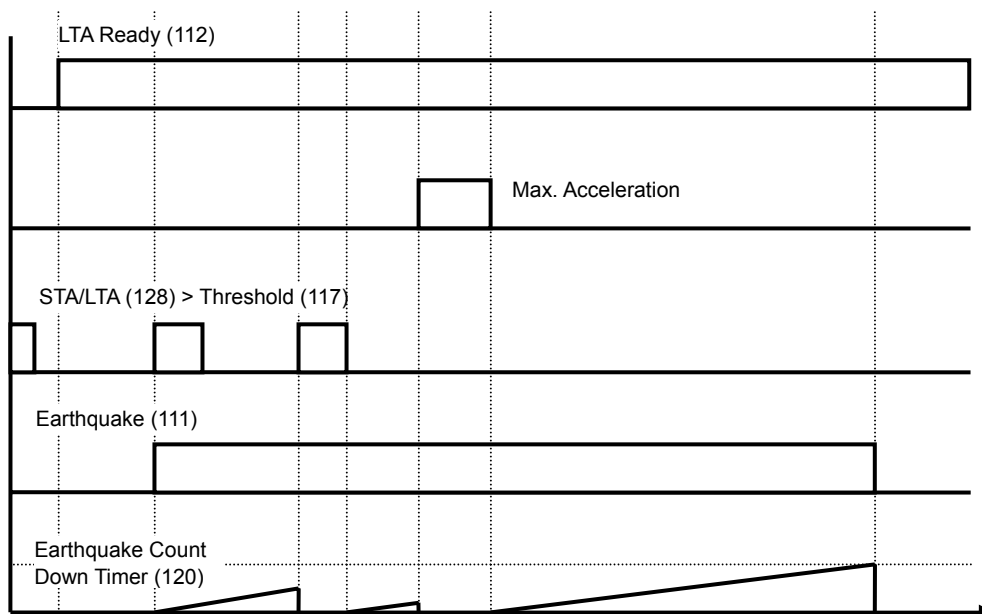

4.4.5. Displacement, Pd, and PGA Trigger Time Sequence

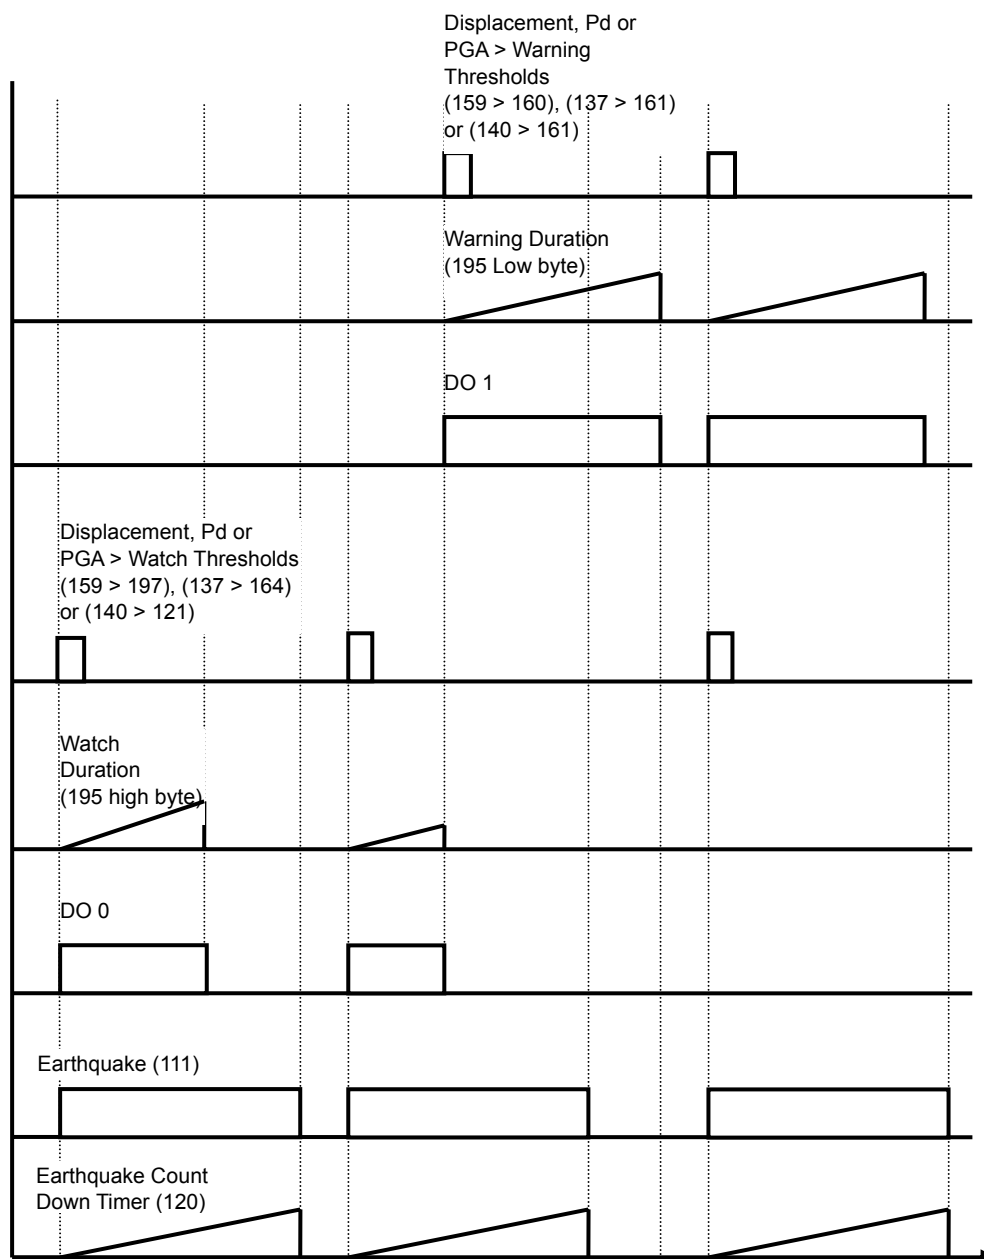


Table 1. Earthquake Intensity Table, Central Weather Bureau, Taiwan.

| Intensity Scale | | Range of Ground Acceleration | Effects on People | Effects Indoors | Effects Outdoors |
|-----------------|-------------|------------------------------|--|--|--|
| 1 | Very minor | 0.8~2.5gal | Felt only by a few people at rest, vibrates slightly. | | |
| 2 | Minor | 2.5~8.0gal | Felt by the majority of people. Some awakened from sleeping. | Hanging lamps and objects vibrate slightly. | Standing vehicles vibrate slightly, similar to being passed by a truck, but only lasts for a short time. |
| 3 | Light | 8~25gal | Felt by nearly everyone, a few frightened. | Buildings shake; dishes, windows, and doors shake making sounds; hanging objects shake visibly. | Standing vehicles vibrate obviously; electric wires sway gently. |
| 4 | Moderate | 25~80gal | Many people are quite frightened, looking for safe shelter. Most people are awakened from sleep. | Buildings rock noticeably; unstable objects topple over; heavy furniture moves; may cause slight damage. | Felt by drivers; electric wires sway obviously, felt by people walking. |
| 5 | Strong | 80~250gal | Most people are considerably frightened. | Walls crack; heavy furniture may overturn. | Noticeably felt by drivers; some chimneys and large archways topple over. |
| 6 | Very Strong | 250~400gal | People have trouble walking due to violent rocking. | Damage to some buildings; heavy furniture overturns; doors and windows bend. | Drivers have trouble steering; sand and clay blasts occur. |
| 7 | Great | 400gal and above | People move with difficulty due to severe rocking. | Severe damage to or collapse of some buildings; almost all furniture moves or falls down. | Landslides and faults rupture occur; railway bend; underground lines break. |

Note: 1gal = 1cm/sec*sec

Appendix 1. EEW Paper by Professor Yih-Min Wu., National Taiwan University.